




Level the mount and mark.

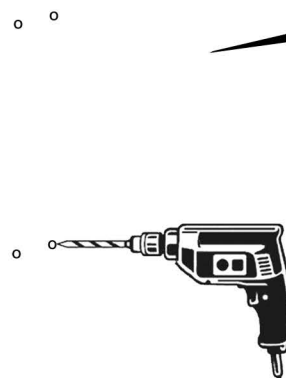


Drill the mounting holes.

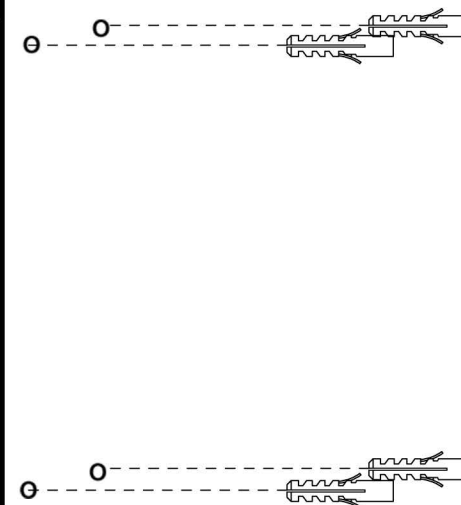


Insert the wall anchors\* to the wall and tap them flush with a hammer.  
\* Never use wall anchors on drywall

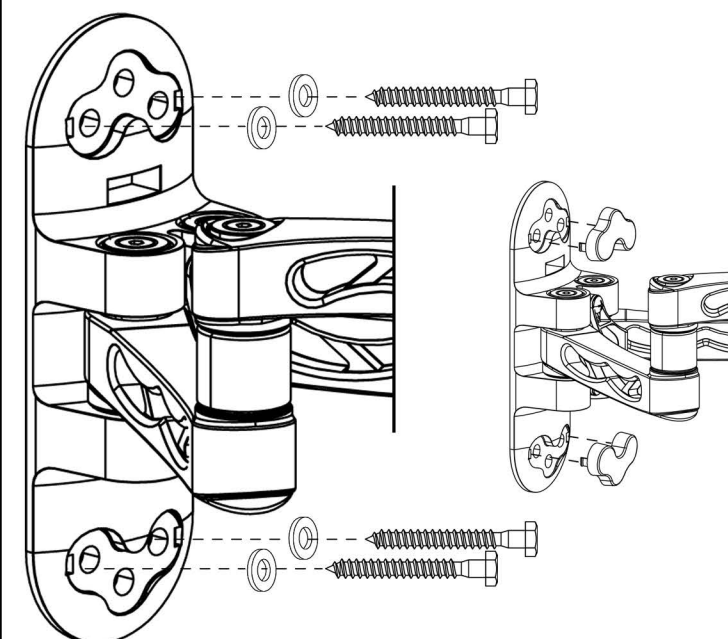


Fix the plate to the wall.

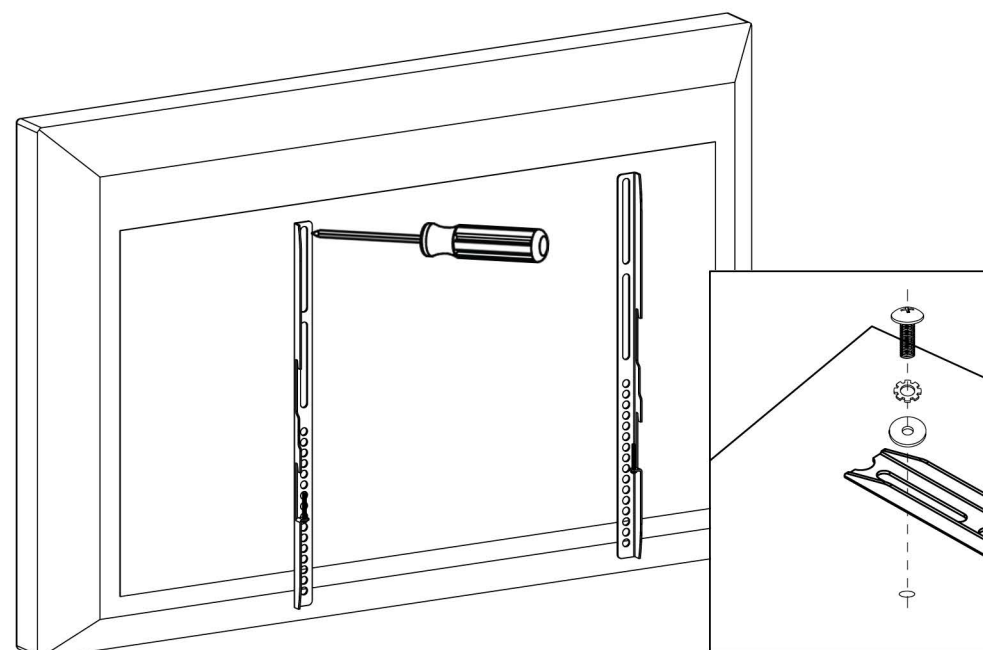


Attach mount to the screen.

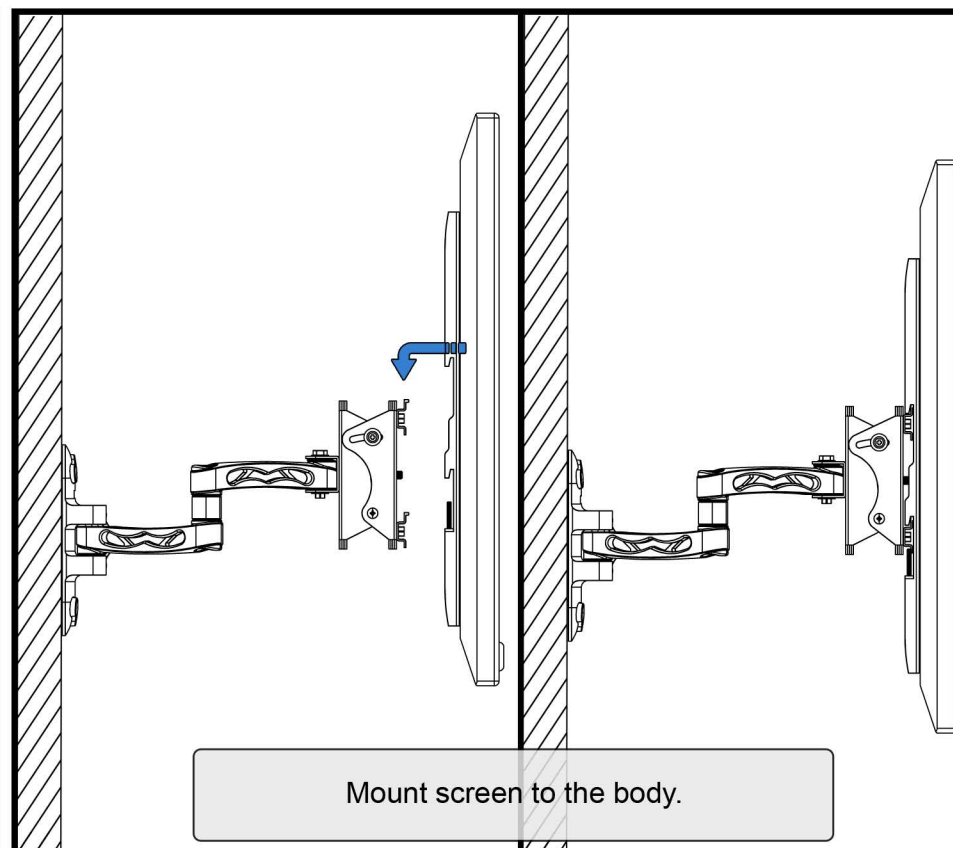


Mount screen to the body.

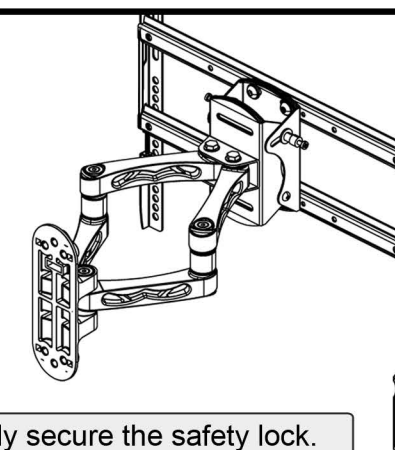


Tightly secure the safety lock.

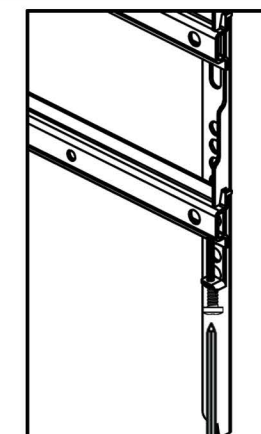


**ROTATE**

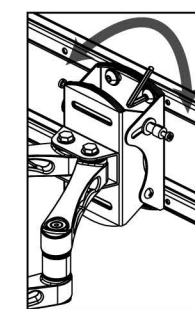

**TILT**

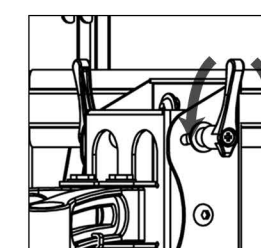


**SWIVEL**

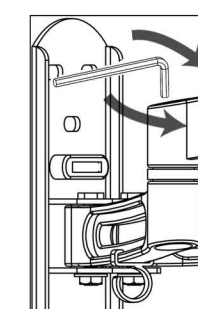


If too loose or too tight.

## HARDWARE KIT




x4



M4

x4




M5

x4




M6

x4



M8

x4



M6


x4



x2



x4



x4



M4

x4



M5

x4




M6

x4



M8

x4



x1

**SONOROUS**  
SOUND AND VISION IN STYLE